


How to use XVBase to set frequency?

1. Do not select "timer" when setting parameters. If "timer" is selected, the configured parameters will be reset.

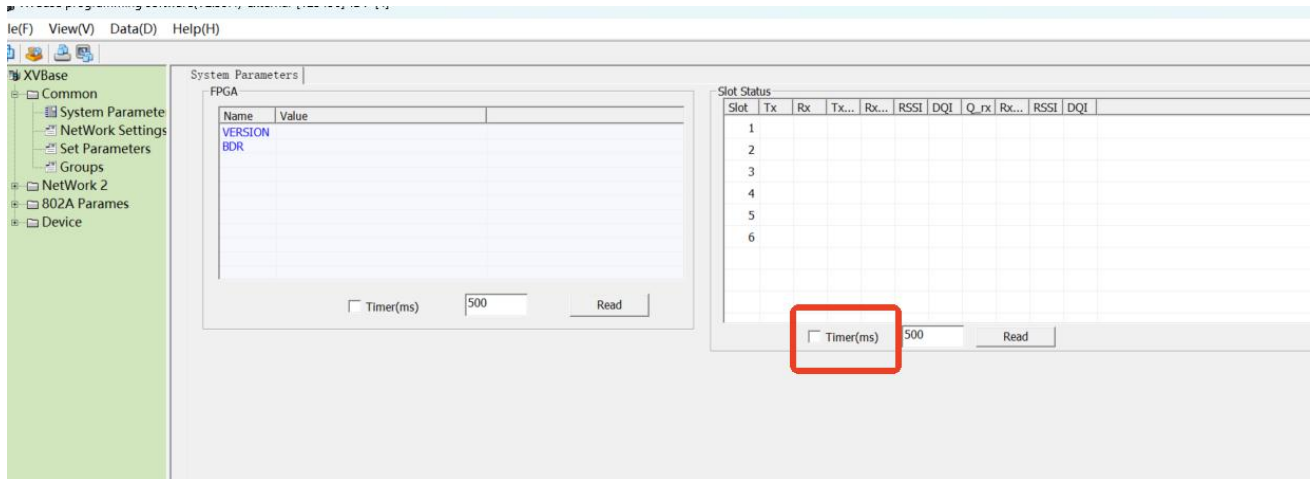

2. Set frequency

Setp 1 Set Parameters→Step 2 Set Frequency→Step 3 Click Reset

